


## **Spreader Post**

- 1. Cut-Off Old Pound Pad.
- 2. Inspect Lifting Device
- 3. Weld on New Pound Pad 100%

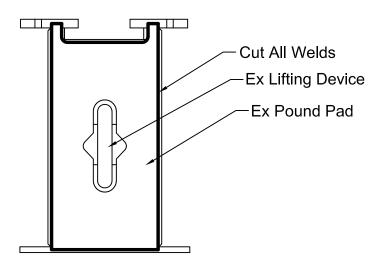

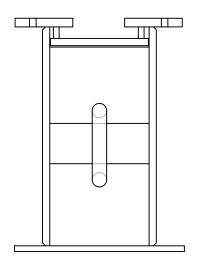

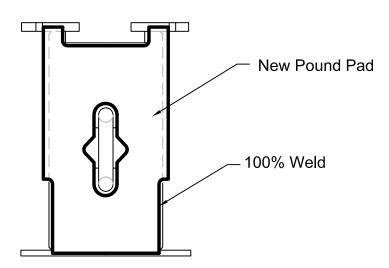

## Subject To Engineering Approval.

All Information Included Or Referenced Herein Shall Be Treated As Confidential To Pro-Tec Equipment © 2014



Equipment
48906 (517) 827-3250 1-800-292-1225

1 Slide Rail Panel Repair Procedure